



ew 300-500 G4

 
Quick Guide

Kurzanleitung
Guide rapide
Guia rápida
Guía de inicio rápido
Guia rápida
Beknopte handleiding
Krótka instrukcja obsługi
Snabbguide

Kort vejledning

Pikaohje
Γρήγορος οδηγός
Kisa Kilavuz
Краткая инструкция
快速指南
快速使用指南
クイックガイド
quick 가이드

SENNHEISER



Sennheiser Documentation App



Available on the App Store

or online at
www.sennheiser.com/download
ew 300-500 G4_

Sennheiser electronic GmbH & Co. KG

Am Labor 1, 30900 Wedemark, Germany


Publ. 01/18, 575861/A01

EM 300-500




SKM 300 | SKM 500

SKM 300

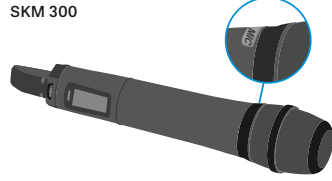

SKM 500

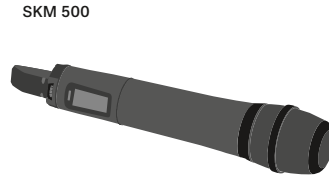

SK 300 | SK 500


SK 300




SK 500



Battery

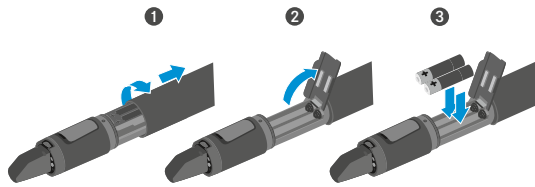


Low Battery

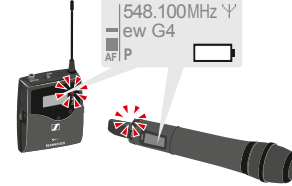


	100 %	> 8 h
	70 %	4 - 6 h
	30 %	2 - 3 h

LOW BATT

Setup

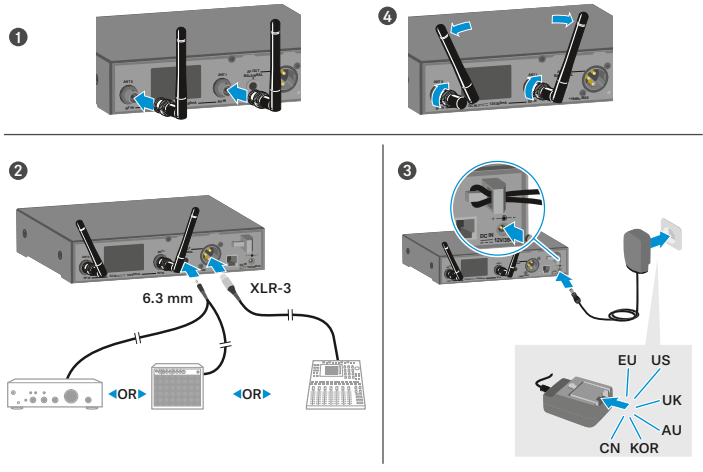



On

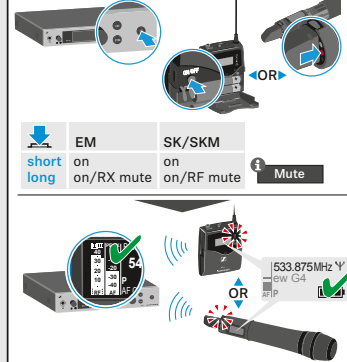



Off



Menu

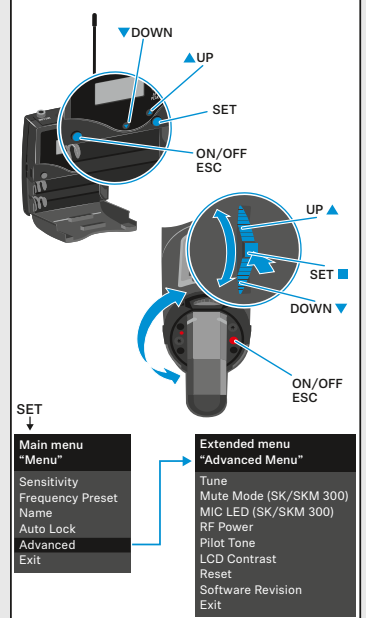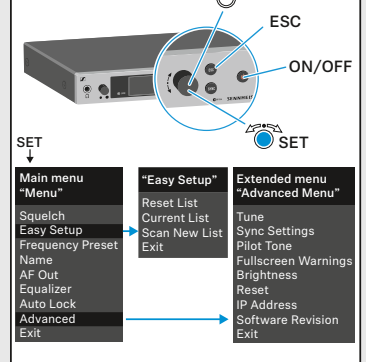

Standard display

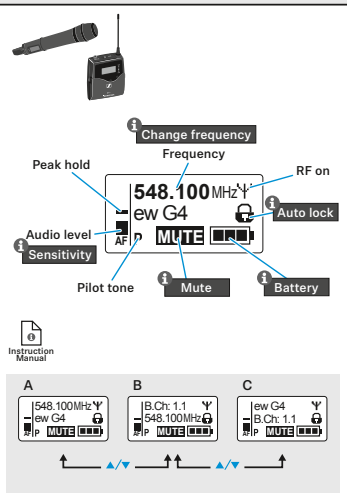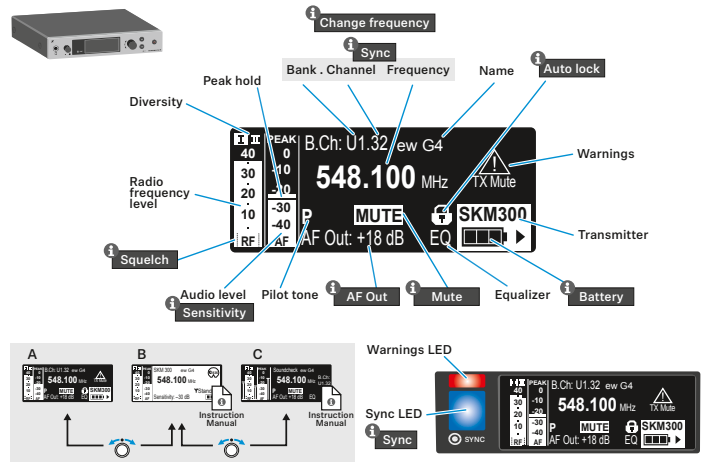

Auto lock

EM

- 1
- 2
- 3

Locked Unlock?

SKM

- 1
- 2
- 3

Locked Unlock?

SK

- 1
- 2
- 3

Locked Unlock?

... 10 s ... Auto lock

Instruction Manual

New frequency

Squelch

- 1

25 dB

5 dB

Change frequency

- 2 SKM/SK off!
- 3

Easy Setup EM	Frequency Preset EM, SK, SKM
Menu Squelch Easy Setup Frequency Preset SET	Menu Frequency Preset B.Ch. 1.1 SET
Easy Setup Current List Scan New List Exit SET	Frequency Preset B.Ch. 2.6 538.025 MHz SET
Scan New List 1...20 518...538 MHz WAIT 30 s	Frequency Preset B.Ch. 2.1 538.025 MHz SET
Easy Setup Bank U6 Bank 1 Bank 2 Free: 24 SET	Stored
Easy Setup B.Ch. 2 1 Sync lew300 G3 538.025MHz SET	
Stored	

No frequency → 1 Squelch: Middle ... Instruction Manual

Sync

- 4

≤ 10 cm
≤ 4"

SYNC

OR

X SYNC

Instruction Manual

Mute

Instruction Manual

RMS 1 short SK 300

OR

SK 300 SK 500

SKM 300

MIC SKM 300

short SKM 300 SKM 500

Menu Advanced SET	AF Mute Mute On
Advanced Mute Mode AF On/Off SET	Mute Off
Mute Mode AF On/Off SET	RF Mute Mute On
Mute Mode RF On/Off SET	Mute Off
Mute Mode Push to Talk SET	
Mute Mode Push to Mute SET	

RF Mute On?

RF Mute Off?

SET

RX Mute

EM 300-500

short

RX Mute On?

RX Mute Off?

Network Control

WSM
Sennheiser
Control Cockpit
Media Control

Multichannel - Easy Setup

Bank 1...20; U1...U6
Channel 1...32

max. 32 channels

RJ 45

Instruction Manual

Sensitivity

Menu
Sensitivity
-24 dB

-60 dB ... 0 dB

-48 dB ... 0 dB

AF PEAK

AF out

Menu
Name
AF Out
Equalizer
+18dB

LEVEL

-24 dB ... +24 dB

SKM

ME 2 | MKE 2

ME 2

25 cm (10")

MKE 2

SL Headmic 1

2...3 cm (1")